

their safety is essential.

Protecting people, property, and the planet.

U.S. Navy Safety Cabinets

Safe, compliant storage solutions designed to meet NAVSEA ship requirements

- Suitable for onboard installations of U.S. Navy ships and submarines
- Qualified to U.S. Navy Shock B and Vibration Testing MIL-DTL-901 and MIL-STD-167-1A
- Qualified to Submarine Atmosphere Control Manual, S9510-AB-ATM-010/(U)
- FM-approved safety cabinets, fully meeting requirements of OSHA, MSHA, NFPA 30, NFPA 400, NFPA 1, IFC
- Models available for flammable liquids storage (yellow) and for hazardous material (corrosives) storage (royal blue)
- Qualified in accordance with Federal Specification AA-C-101A Type I and II, Class I and II




Double-wall construction as required by OSHA and Fire Codes for the performance of the cabinet in a fire.

Patented SpillSlope® shelf directs spills to the back and bottom of leakproof sump


Secure cabinet in place by welding specially designed feet to ship's deck or hull

Equipped with brackets to secure shelving from impact loading like the U.S. Navy Shock B Testing.

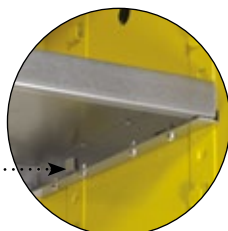

Self-closing door with 3-point self-latching system ensures safe, secure closure

Hazardous materials safety cabinets for corrosives come with poly liners for shelves and sump.

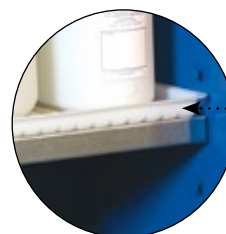



For storage on board:

- U.S. Navy Ships: approved for installation on board CG 47, CVN 68/78, DDG 51/1000, LCC 19, LCS 1/2, LHA 6, LHD 1, LPD 17, LSD 41/49, MCM 1 Ship Classes.
- U.S. Navy Submarines: approved for installation on SSBN/SSGN 726 AND SSN 688 Class Submarines, and for mitigated deck mounted mounting locations on SSN 774 AND SSBN 826 Class Submarines, only.

Construction:

- Specially designed cabinet feet allow cabinet to be secured to ship's deck or hull by welding.
- Each cabinet is supplied with two fully adjustable galvanized shelves with brackets to secure them in cabinet to shelf hooks. Shelves have a 350 lb load capacity.
- Constructed of 18 gauge steel double-wall construction, with 1.5 in (38 mm) insulating air space, welded construction, with self-closing door with 3-point self-latching stainless steel bullet slams.
- Hazardous materials safety cabinets for corrosives come with shelves and sump poly liners.



8912207



8615287

Model	Capacity	Description	US Navy	Color	Exterior H x W x D	Interior H x W x D	CA Prop 65
8912207	12 gallon	Flammable liquid storage	Type I, Class 1	Yellow	37.5 x 23.25 x 18 in	30.5 x 20 x 14.75 in	
8612287		Hazardous material storage	Type II, Class 1	Blue			
8915207	15 gallon	Flammable liquid storage	Type I, Class 2	Yellow	46.5 x 23.25 x 18	39.5 x 20 x 14.75 in	
8615287		Hazardous material storage	Type II, Class 2	Blue			

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

To learn more about our full portfolio of products, please visit justrite.com

The appearance of U.S. Department of Defense (DoD) visual information does not imply or constitute DoD endorsement.