

NOTE: ONLY INSTALL THE LEGS ONTO AN EMPTY CABINET AFTER EVERYTHING ON THE INSIDE HAS BEEN REMOVED.



1) SAFELY TIP THE CABINET BACK SO THAT THE CABINET IS HORIZONTAL AND ON ITS BACK. REST THE CABINET ON SOMETHING THAT BOTH HOLDS THE BACK OF THE CABINET OFF THE GROUND BY AT LEAST 2" AND WILL NOT SCRATCH THE PAINT ON THE BACK OF THE CABINET.

3) INSTALL (6) SCREWS THROUGH THE HOLES ON THE LEGS INTO THE BOTTOM OF THE CABINET. THERE ARE PILOT HOLES IN THE BOTTOM TO INSTALL THE SCREWS INTO.

5) REPEAT STEPS 2, 3 AND 4 TO INSTALL THE LEG ASSEMBLY AT THE BACK SIDE OF THE CABINET WITH THE LEGS ORIENTED OPPOSITE DIRECTION OF THOSE INSTALLED ONTO THE FRONT.

7) SAFELY LIP THE THE CABINET OFF OF ITS BACK AND ONTO ITS LEGS.

ITEM NO.	PART NUMBER	Description	QTY.
1	U893020	30G UTILIGUARD SAFETY CABINET	1
2	S44543PB	PAINTED SKID LEG ASSEMBLY W/RIVNUTS	2
3	RM04503W	LEG LEVELLER 3/8-16 X 2"LG	8
4	RM05556W	SCREW #12-14X1" SELF DRILLING	12

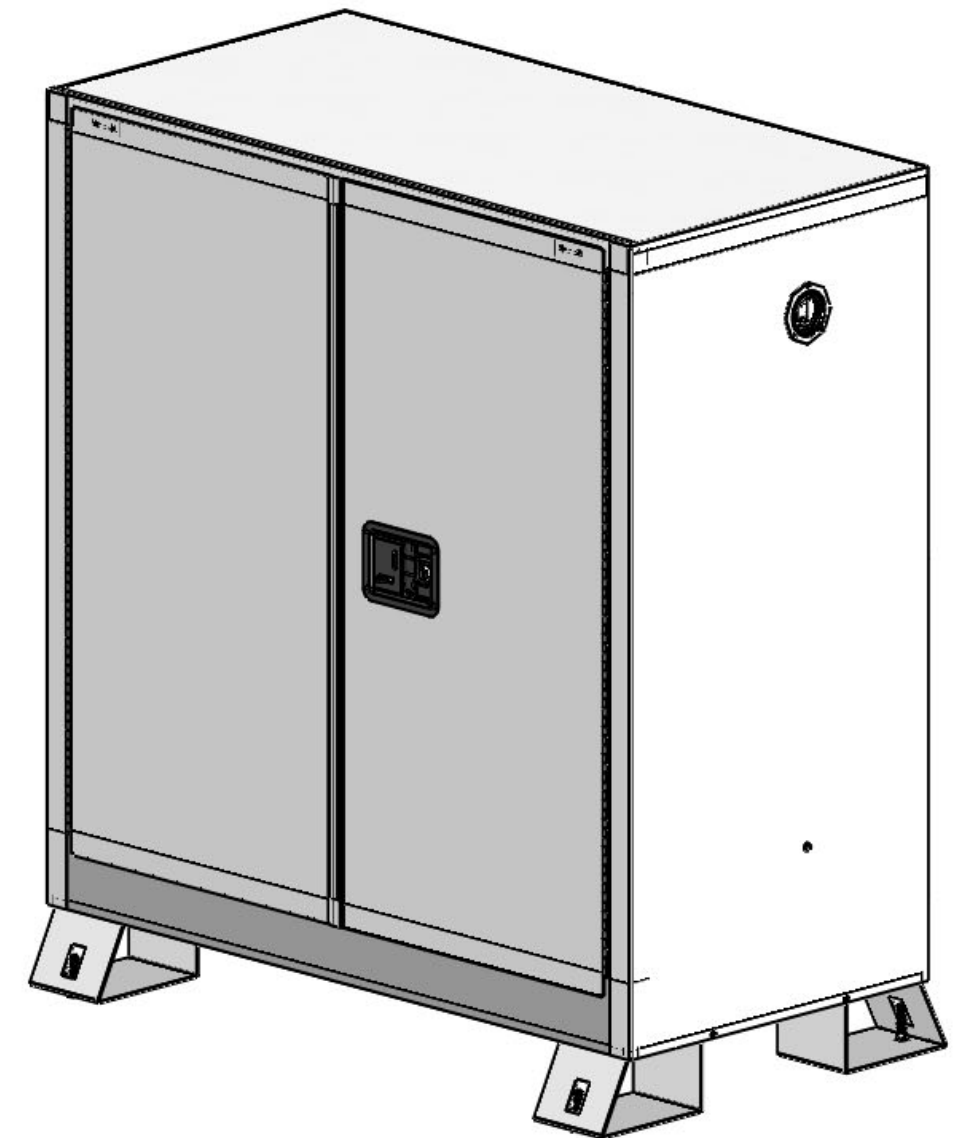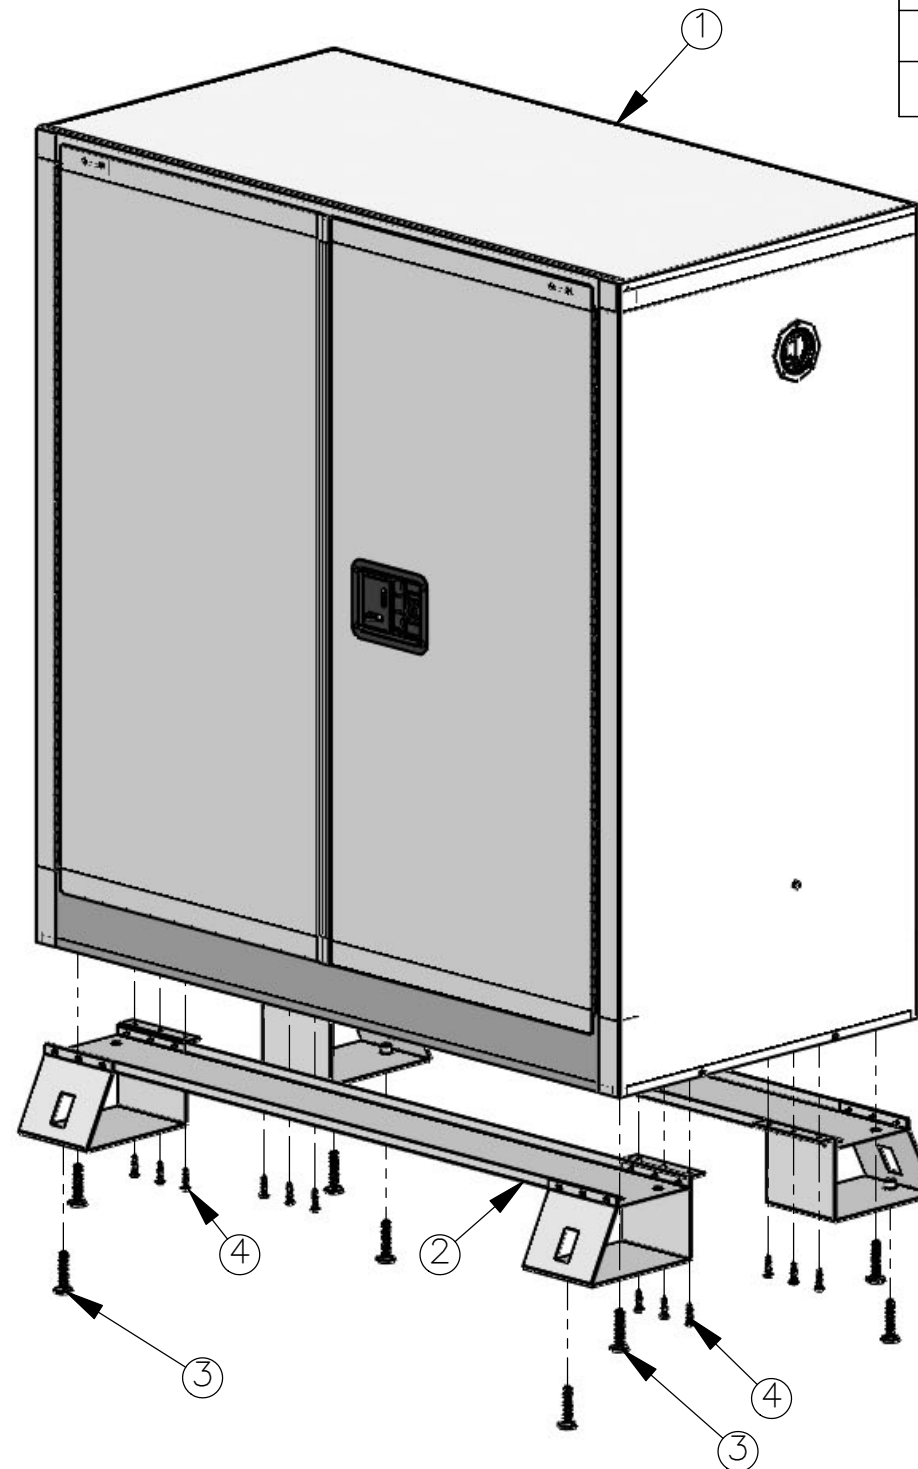

COPYRIGHT © 2019 JUSTRITE

REVISIONS:			
REV.	DATE:	DESCRIPTION:	BY:

NOTES:

MATERIAL DESCRIPTION:

This document and the information contained therein are the property of JUSTRITE MANUFACTURING COMPANY, Mattoon, Illinois. Recipient agrees NOT TO: (1) Use such information for purposes other than those expressly authorized by JUSTRITE MANUFACTURING COMPANY. (2) Furnish such information to any other person in whole or in part for any purpose whatsoever without the express written permission of JUSTRITE MANUFACTURING COMPANY. (3) Reproduce or copy this document either in whole or in part without the

ALL DIMENSIONS IN INCHES (MM)
TOLERANCES
(UNLESS OTHERWISE NOTED)
LINEAR DIMENSIONS:
X.X = $\pm .060$ (1.5 MM)
X.XX = $\pm .030$ (.76 MM)
X.XXX = $\pm .015$ (.38 MM)
ANGULAR DIMENSIONS: $\pm 1^\circ$

DRAWN BY: RFA

DATE: 7/11/25

The image shows the top section of a technical drawing. On the left is the Justrite logo, which consists of a stylized flame inside a circle. To the right of the logo is the word "Justrite" in a large, bold, sans-serif font, with a small "TM" trademark symbol to its upper right. Below the logo and brand name, the address "JUSTRITE 3921 DEWITT AVENUE MATTOON, ILLINOIS 61938 U.S.A." is printed in a smaller, all-caps, sans-serif font. In the top right corner of this section, the dimensions "B 11 X 17" are printed. Below the address is a horizontal line. Below that line is a rectangular box containing the text "TITLE: INSTRUCTIONS SKID LEG KIT INSTAL" in all caps. Below the title box is another horizontal line. Below that line is a rectangular box containing the text "DRAWING NO: RM09420" in all caps. To the right of this box is another rectangular box containing the text "REV: " followed by a horizontal line.